

 
# CORD TENSION LOCK

## INSTALLATION INSTRUCTIONS

It is imperative that the cord tension lock for bead chain and cord loops be properly secured to the wall or window frame to reduce a child's access to the chain or cord loops. Young children and pets can wrap bead chains and cord loops around their necks and strangle. Always keep the bead chain and cord loops secure and out of the reach of children and pets.

**CAUTION:** The Cord Tension Lock will be attached to the chain or cord loop. The shade will not operate properly unless the body has been attached to the inside or outside bracket. Additional parts will be sent separately.

### Parts List

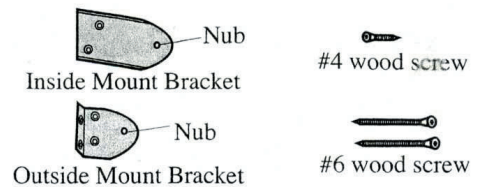

### Install Cord Tension Lock

The Cord Tension Lock can be installed inside a window casing with the inside mount bracket, or outside mount with the outside mount bracket. Make sure the Cord Tension Lock is not placed in the path of the bottom rail or fabric.

### Inside Mount

 
- Attach the lock to the inside mount bracket with the short screw. The nub on the bracket fits into the back of the screw hole on the lock.
- Pull down on the bracket, align the center of the screw hole with the indicator line on the lock as shown.
- While holding the lock firmly in place, check if the loop can move freely through it.
- 

If the Cord Tension Lock locks onto the loop, it is too loose and the bracket and lock should be moved down.

If the loop does not run freely through the lock, it is too tight and the bracket and lock should be moved up.

- Mark and pre-drill the screw holes.
- Pull down on the bracket and lock, align it with the drilled holes, and mount the bracket to inside the window casing with the two long screws.
- Check to ensure the loop can move freely through the lock without engaging the lock.

### Inside Mount

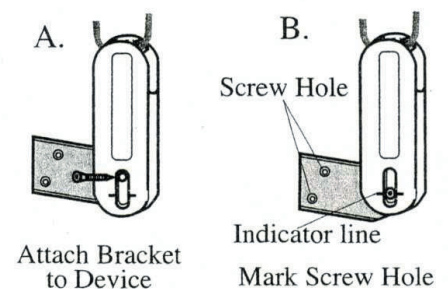

## Outside Mount

- Attach the lock to the inside mount bracket with the short screw. The nub on the bracket fits into the back of the screw hole on the lock.
- Pull down on the bracket, align the center of the screw hole with the indicator line on the lock as shown.
- While holding the lock firmly in place, check if the loop can move freely through it.

If the Cord Tension Lock locks onto the loop, it is too loose and the bracket and lock should be moved down.

If the loop does not run freely through the lock, it is too tight and the bracket and lock should be moved up.

- Mark and pre-drill the screw holes.
- Detach the lock from the bracket by removing the short screw.
- Align the bracket screw holes with the drilled holes and mount the brackets to the wall with two long screws.
- Reattach the lock to the bracket with the short screw.
- Check to ensure the loop can move freely through the lock without engaging the lock.

