




Installation Instructions

TLC with CareRING


Thank you for choosing shades using the TLC with CareRing. With proper installation and care, your new shades will provide many years of beauty and performance.

Tools and Fasteners Needed

- Power Drill, 1/4" Driver and drill bits (6"-7")
 - Tape Measure
 - Flat blade Screwdriver
 - Phillips Screwdriver
 - Pencil
 - Level
 - Awl
- 

Mounting Surface	Fastener
Wood	#6 Hex Head Provided 
Drywall, Plaster	Wall Anchors Not Provided 
Metal	Sheet Metal Not Provided 

Parts List	
Screws:	1 1/2" into wall
	3/4" into headrail
	3" for Inside Mount

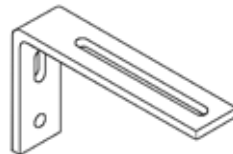

Bracket


Shade Width	Brackets Required
16" - 36 1/4"	2
36 3/16" - 72 3/16"	3
72 1/2" - 84"	4

Before Installing

- Remove shade from the package. Keep all packaging until the shade operates to your satisfaction.
- Contents of your hardware package may vary depending on options chosen.
- Additional fasteners may be needed based on your specific mounting surface.

L Bracket

- L brackets will be sent based on the projection requested.
- Measure in approximately 3 1/4" from each end to determine the two end bracket locations checking for any obstructions.
- Secure the brackets to the wall using 1 1/2" screws.
- Center the shade on the brackets.
- Secure the shade to the brackets using 3/4" screws.

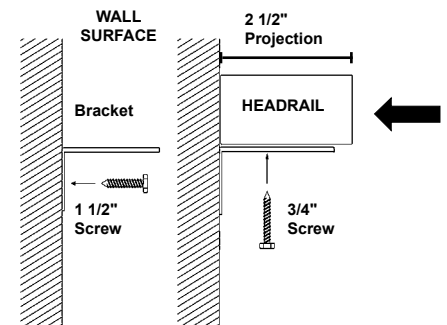

Standard Inside Mount Installation

2 1/2" Projection

- Pre-drill vertically through the headrail with a 3/16" bit before securing with a screw.


Operating Instructions

- In order for shade to lower completely, gently pull CareRING 1-2" beyond shade length.

Caution:

- Do NOT over pull CareRING, this will pull the cord off the tube, causing the product to fail. Should this happen, reach behind the tube attached to the headboard and rotate the tube towards you from top to bottom. This will re-engage the spring.

SIDE VIEW

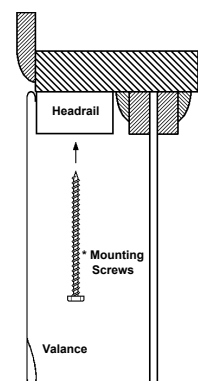

SIDE VIEW
Inside Mount with 2 1/2" Projection